


Parrot Anafi UKR Livestream Integration Details:


Through the integration between our systems, AirWise and Parrot customers can easily use the Anafi UKR with AirWise products for Livestreaming.

To setup the Parrot Anafi UKR for Livestream please follow the instructions below:


1. Power on the Parrot Skycontroller UKR.
2. Tap the three bars in the upper right corner of the screen

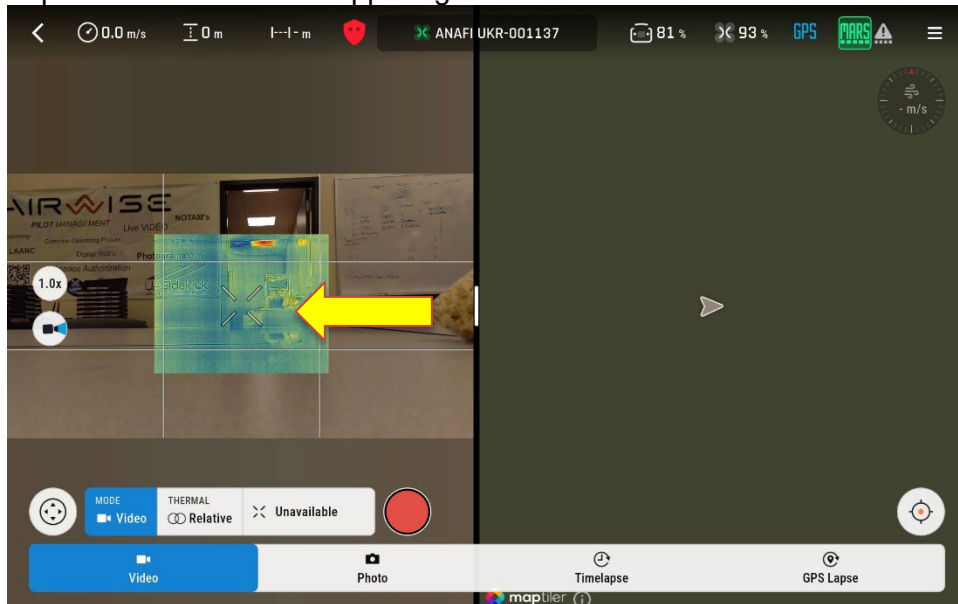

3. On the left side of the screen, scroll down and tap on the 'Stream Sharing' tab

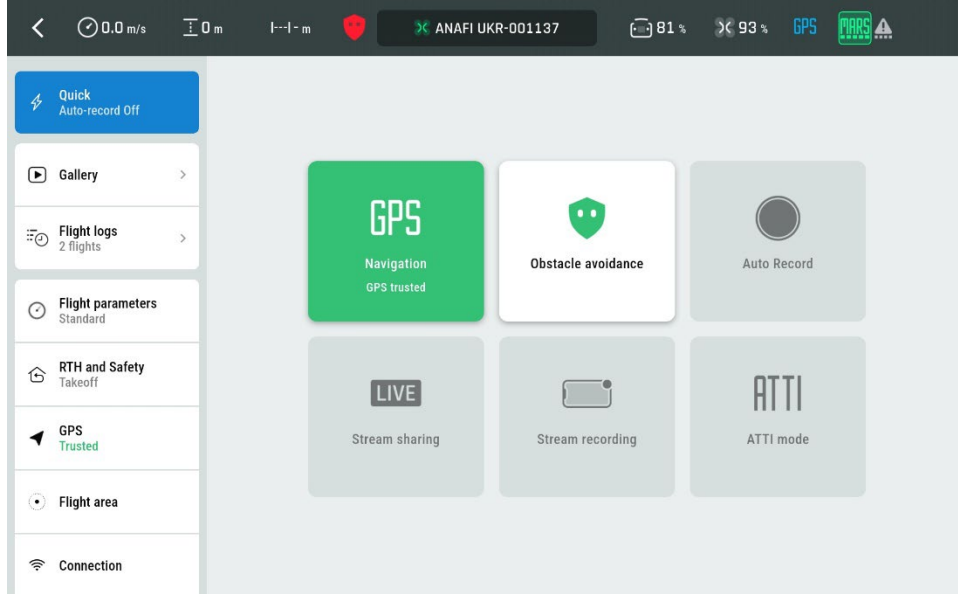

4. Tap on the 'RTMP sharing' button
5. In the 'RTMP server URL' field enter the following RTMP address without the question marks:
rtmp://live.flightmanager.app:1935/livedrone/???
***You will need to replace the question marks ??? with the serial number of your Parrot Anafi UKR drone.*
6. Select the Video resolution: 240p, 360p, 480p, 720p or 1080p (default value is 720p)
7. Select the Max video bitrate (default value depends on the chosen resolution)
8. Enable the Video overlay for telemetry information
9. After all Livestream settings are complete, tap the arrow in the upper left corner to return to the flight screen

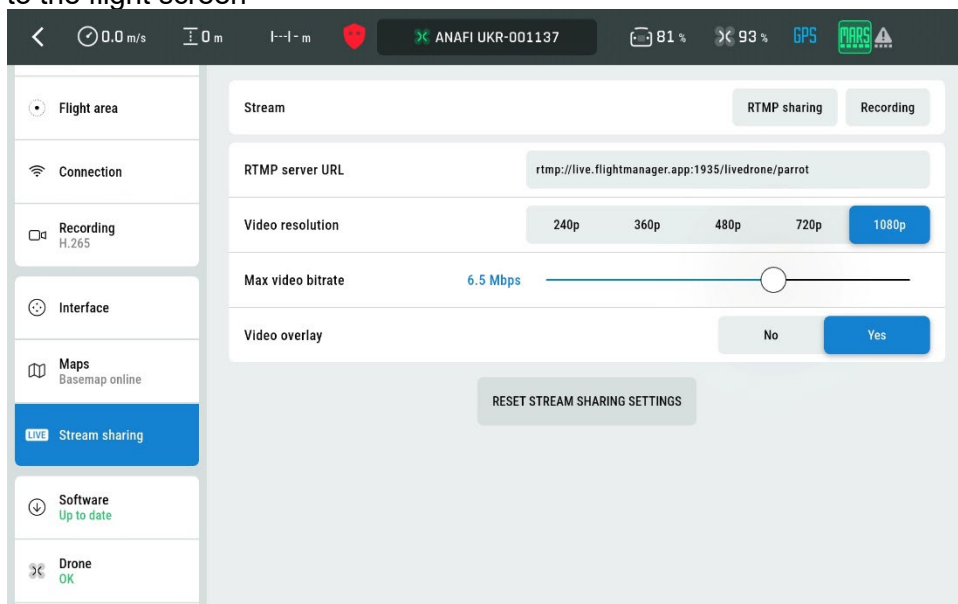

AIRWISE – PARROT ANAFI UKR LIVESTREAM SETUP GUIDE

<

0.0 m/s

0 m

1-1-m

ANAFI UKR-001137

71 %

85 %

GPS

Recording
H.265

Interface

Maps
Basemap online

LIVE Stream sharing

Software
Up to date

Drone
OK

Battery

Controller
Mode 2

Stream

RTMP sharing

Recording

RTMP server URL

rtmp://live.flightmanager.app:1935/livedrone/UKR-001137

Video resolution

240p

360p

480p

720p

1080p

Max video bitrate

6.0 Mbps

Video overlay

No

Yes

RESET STREAM SHARING SETTINGS

<

0.0 m/s

0 m

1-1-m

ANAFI UKR-001137

72 %

87 %

GPS

Connection

Recording
H.265

Interface

Maps
Basemap online

LIVE Stream sharing

Software
Up to date

Drone
OK

Battery

Stream

RTMP sharing

Recording

RTMP server URL

Enter URL

Video resolution

240p

360p

480p

720p

1080p

Max video bitrate

4.0 Mbps

Video overlay

No

Yes

RESET STREAM SHARING SETTINGS

AIRWISE – PARROT ANAFI UKR LIVESTREAM SETUP GUIDE

Recording
H.265

Interface

Maps
Basemap online

LIVE **Stream sharing**

Software
Up to date

Drone
OK

Battery

Controller
Mode 2

Stream

RTMP sharing **Recording**

RTMP server URL

Enter URL

Video resolution

240p360p480p**720p**1080p

Max video bitrate

4.0 Mbps

Video overlay


No**Yes**

RESET STREAM SHARING SETTINGS

UASidekick Video Livestream Integration Details:


To set up AirWise Sidekick for viewing Video Livestream from your drone(s) there are 3 steps that need to be taken.

- 1) Apply Livestream settings to the aircraft in your fleet
 - 2) Determine who the Viewers will be.
 - 3) Create Missions so Viewers can see the Livestreams
-
- 1) The first step is to apply the Livestream settings to the aircraft in your fleet. This can only be done by an Enterprise Administrator.
 - a. Click on the 'Nine-Dot' menu and then select 'Enterprise Admin'

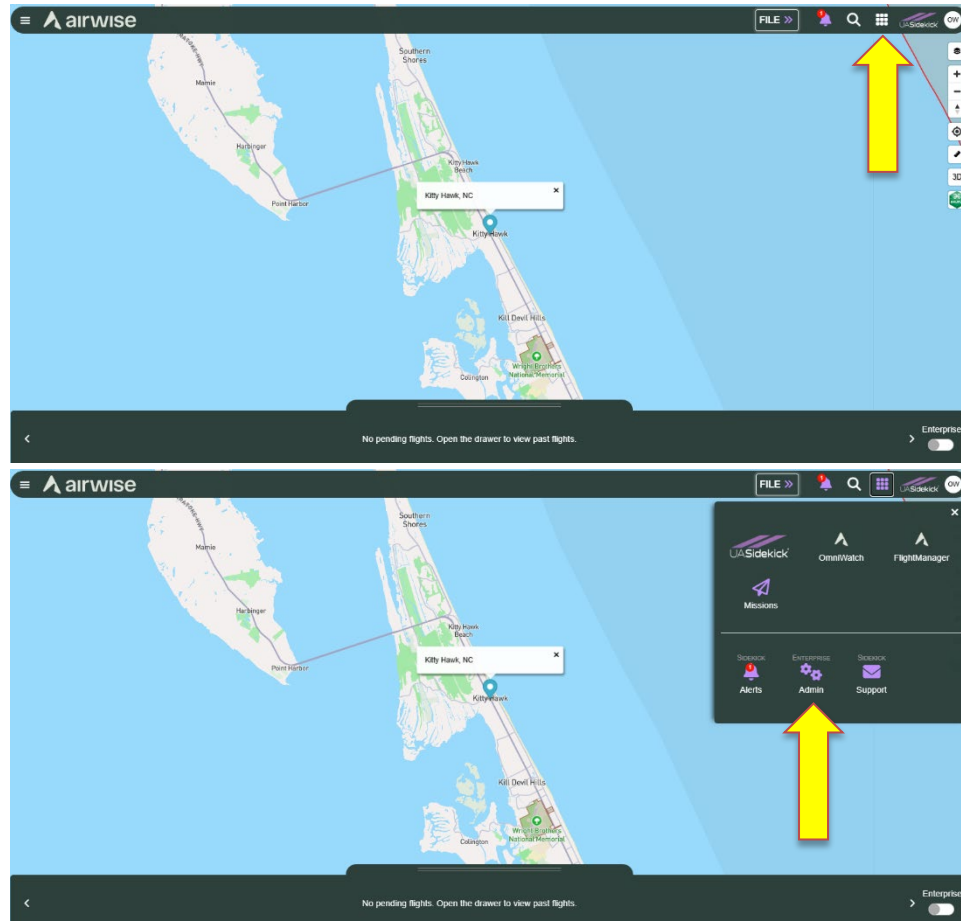


AIRWISE – PARROT ANAFI UKR LIVESTREAM SETUP GUIDE


- b. Click on the 'Aircraft' tab and then select the aircraft to add Livestream

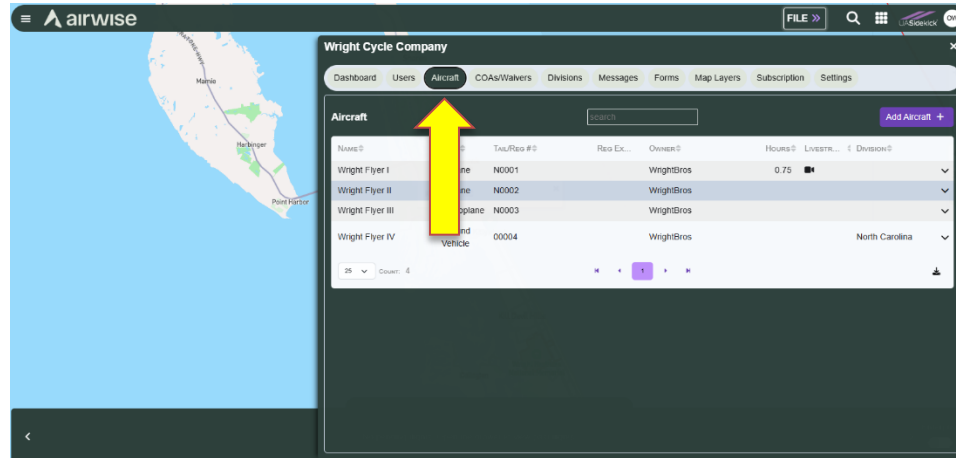

- c. Click the 'Edit' button

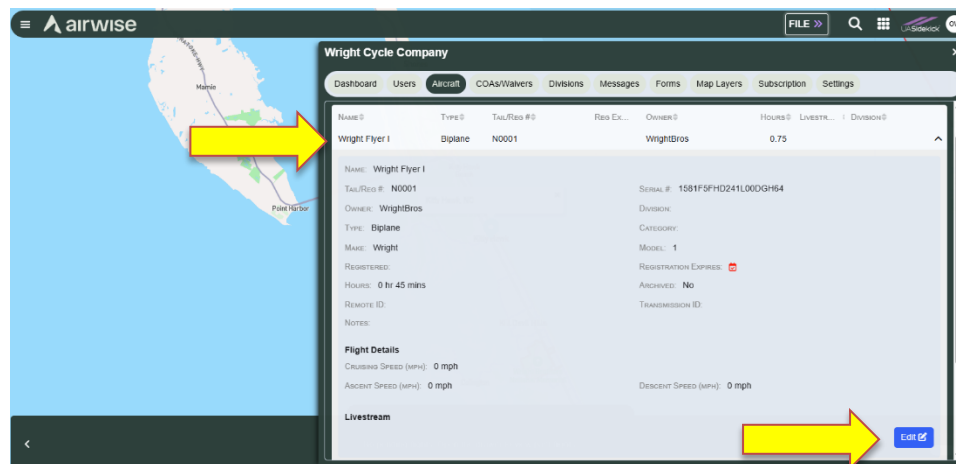


- d. Scroll down to the bottom of the Edit Aircraft window and click on the 'Add Livestream +' link

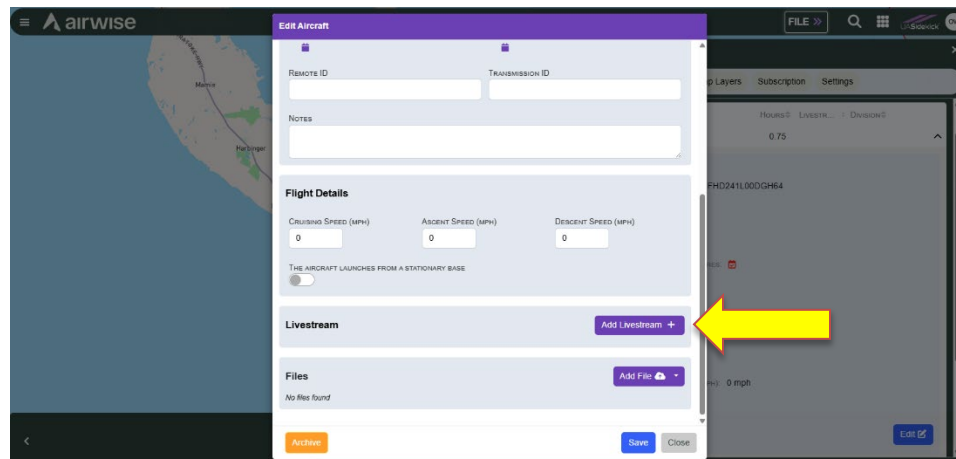


AIRWISE – PARROT ANAFI UKR LIVESTREAM SETUP GUIDE


- e. Enter a name that describes the Livestream. This name will be displayed below the Livestream window.
- f. Enter the drone serial number in the 'ID' field. This serial number MUST match the serial number entered at the end of the RTMP address on the drone controller.
- g. Click the 'Save' button

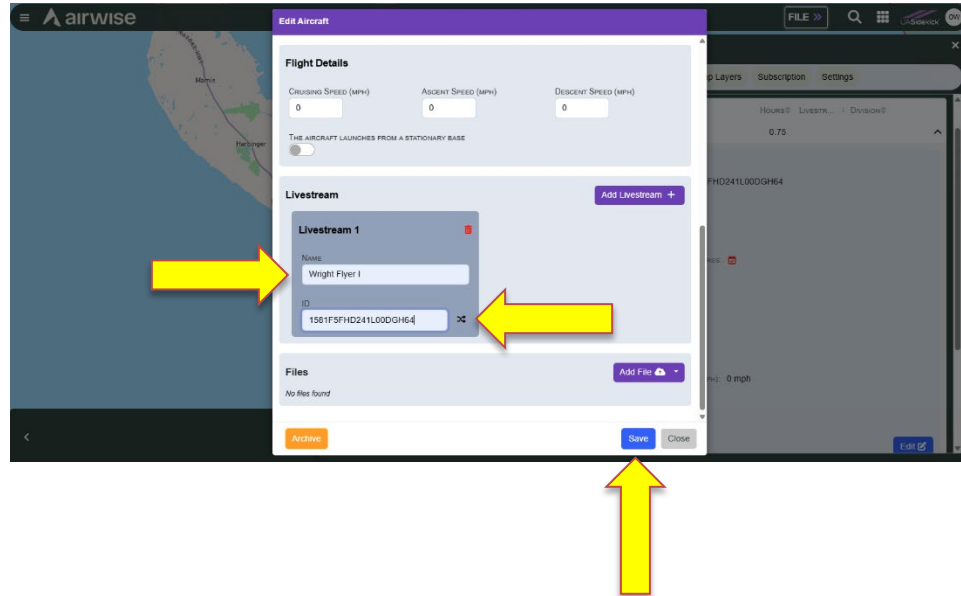

- 2) The next step is determining who the viewers for the Livestream will be. There are two types, Pilots and invited Viewers. All of the Pilots in your organization are automatically eligible to be Livestream Viewers. You can also invite people other than pilots in your organization to be Livestream Viewers. They can either be from inside or outside your organization. The great part is you can invite as many as you want and they do not count against the number of seats your organization has purchased.
- Click on the 'Users' tab of the 'Enterprise Admin' window
 - Click on the 'Viewers' sub-tab
 - Click on the 'Invite Viewer +' button

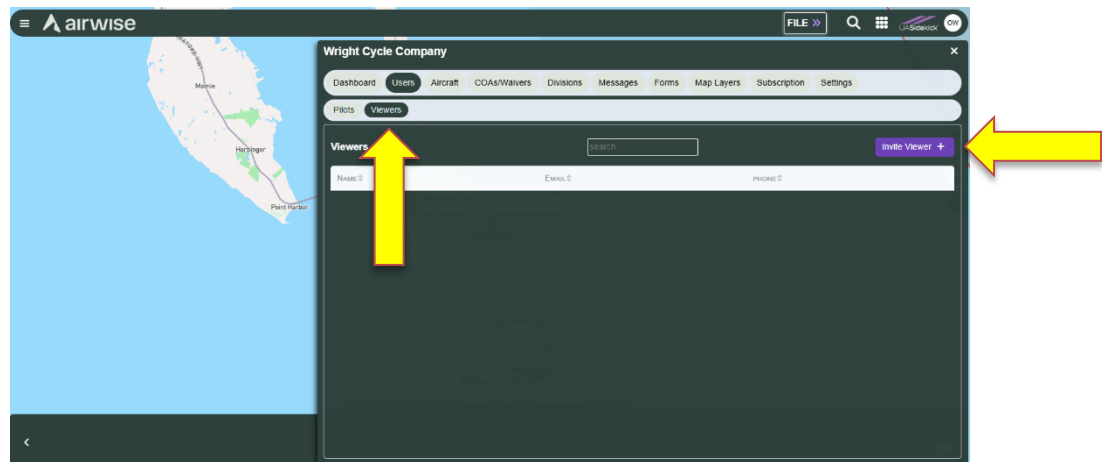


- Enter the email address for the viewer you would like to invite
- Click on the 'Save' button

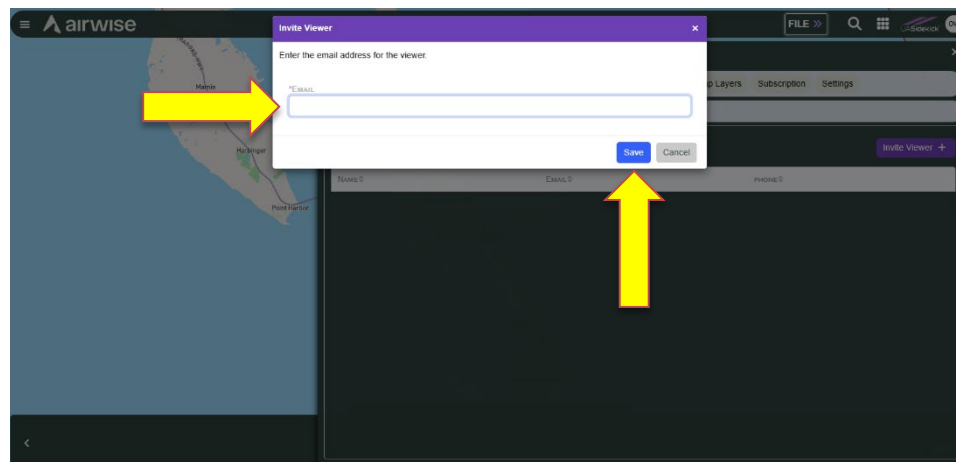


The person you've invited will receive an email with a link to the AirWise Sidekick subscription page. They'll need to create a Viewer subscription by entering their Name, Email, Phone Number and creating a password. They will then be able to receive notification by email or text when the Livestream starts.

3) The last step is to create a Mission. Missions are where the Livestreams are actually viewed.

a. Click on the 'Missions' icon in the 'Nine-Dot' menu

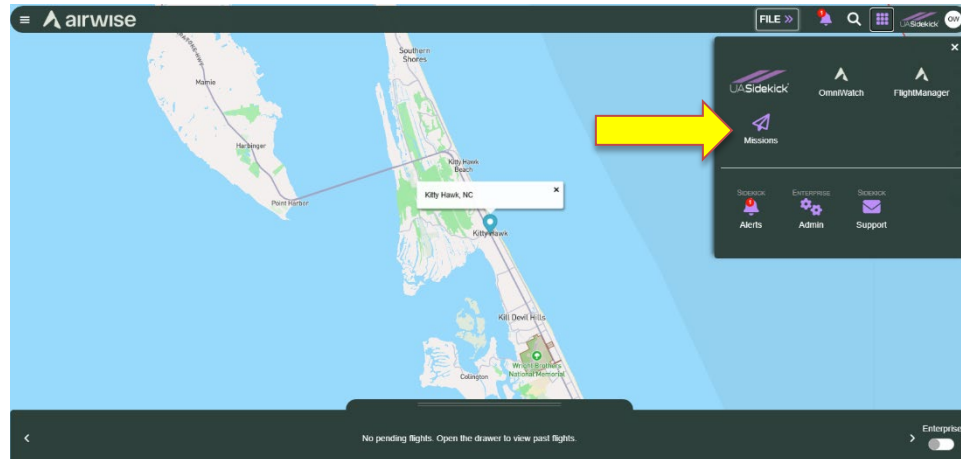

b. Click on the 'Add Mission' button

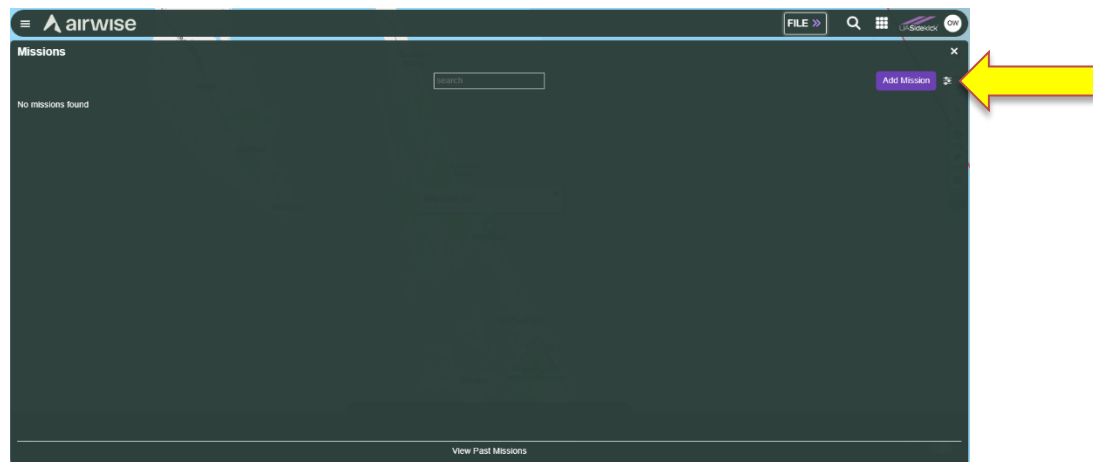


c. Enter a name for the Mission. *This is a required field*


d. You can enter a description for the mission if you'd like.

e. You can select if the Mission is going to be Permanent or not. A permanent mission will always be visible by those with access to the mission. Create a permanent mission for viewers who need quick and always available access to a drone's livestream.


f. If the Mission is not Permanent, enter the date and time when the Mission begins along with the duration of the Mission in Days, Hours and Minutes.

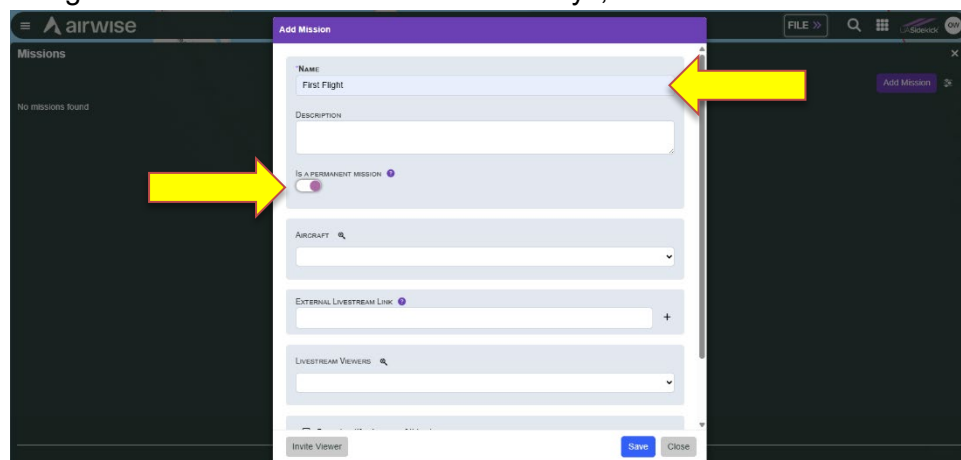

- g. To select which Livestream will be available in the Mission, click on the Aircraft drop down menu and select. You can select as many Aircraft/Livestreams as you like.

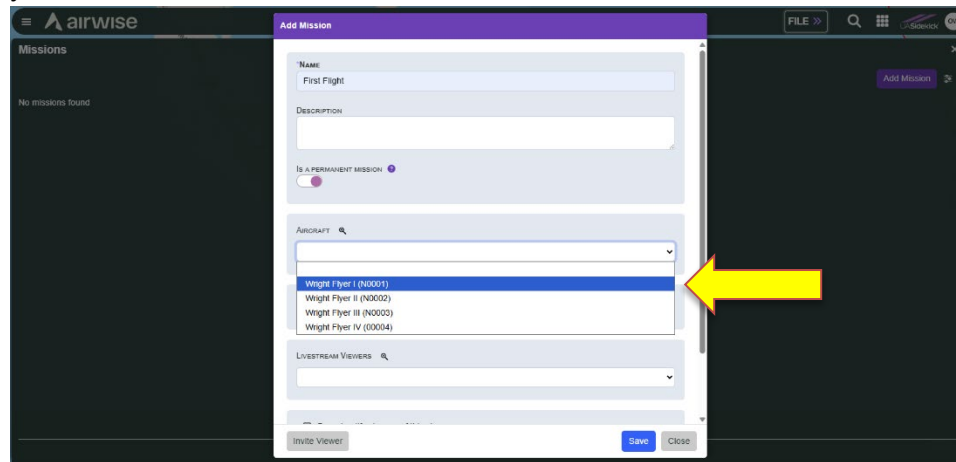

- h. Select which Viewers you would like to add to the Mission by clicking on the 'Livestream Viewers' drop down menu.

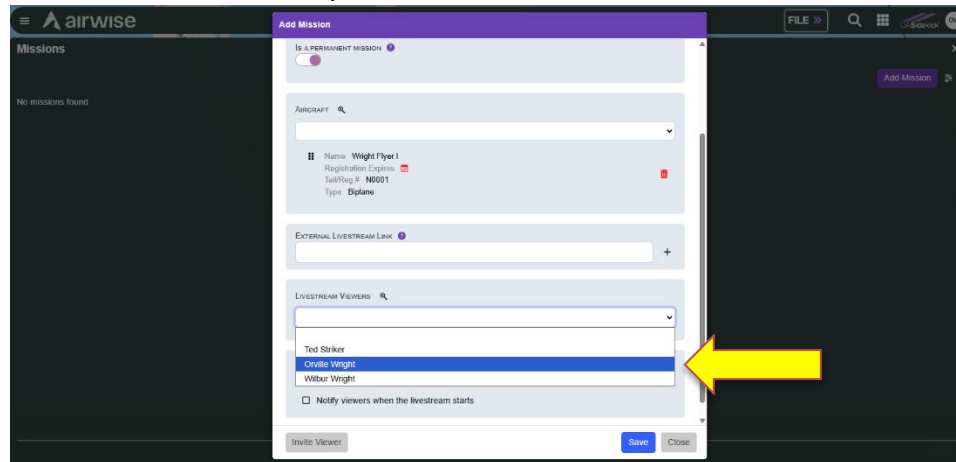

- i. If you do not want the viewers to know when changes are made to the Mission select the check box next to 'Do not notify viewers of this change'
- j. Selecting the check box next to 'Notify viewers when the livestream starts' will allow all of the viewers to receive an email and/or text message when any of the Livestreams in the Mission begin.
- k. If you need to add any additional Viewers you can use the 'Invite Viewers' button in the lower left corner of the 'Add Mission' window.

AIRWISE – PARROT ANAFI UKR LIVESTREAM SETUP GUIDE

- I. Click the 'Save' button when all information has been entered.

The screenshot shows the 'Add Mission' dialog box in the Airwise application. The dialog is titled 'Add Mission' and has a purple header. It contains several sections: 'AIRCRAFT' with a dropdown menu, a section for aircraft details (Name: Wright Flyer I, Registration Expires, Tail/Bus #, Type: Biplane), 'EXTERNAL LIVESTREAM LINK' with a text input field and a plus icon, 'LIVESTREAM VIEWERS' with a dropdown menu and a list of viewers (Orville Wright), and two checkboxes: 'Do not notify viewers of this change' and 'Notify viewers when the livestream starts'. At the bottom, there are buttons for 'Invite Viewer', 'Save', and 'Close'. A yellow arrow points from the left towards the 'Save' button, and another yellow arrow points from the 'Notify viewers when the livestream starts' checkbox down towards the 'Save' button.