


Skydio Livestream Integration Details:


Through the integration between our systems, AirWise and Skydio customers can easily use Skydio aircraft with AirWise products for Livestreaming both RGB and Thermal video streams as well as loading flight telemetry data and creating automatic flight logs.

To setup Skydio aircraft for Livestream and telemetry data please follow the instructions below:


- 1) Log in to your Skydio Cloud account.

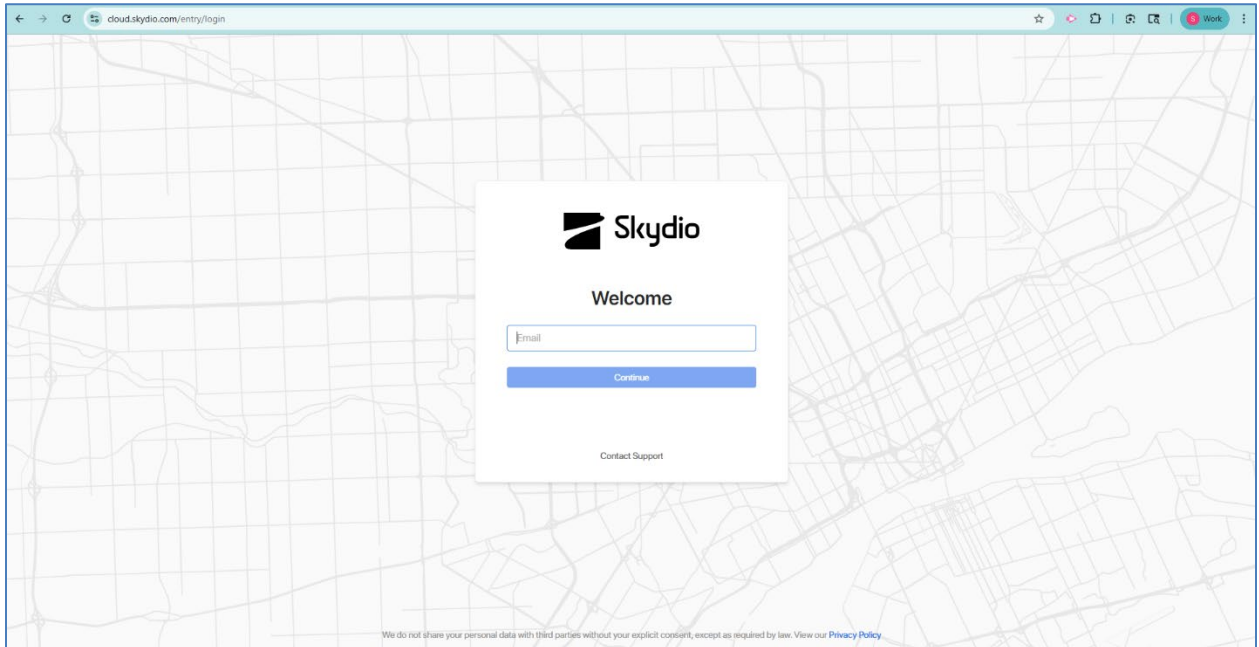


- 2) Click on the 'Integrations' tab on the lower left side of the screen

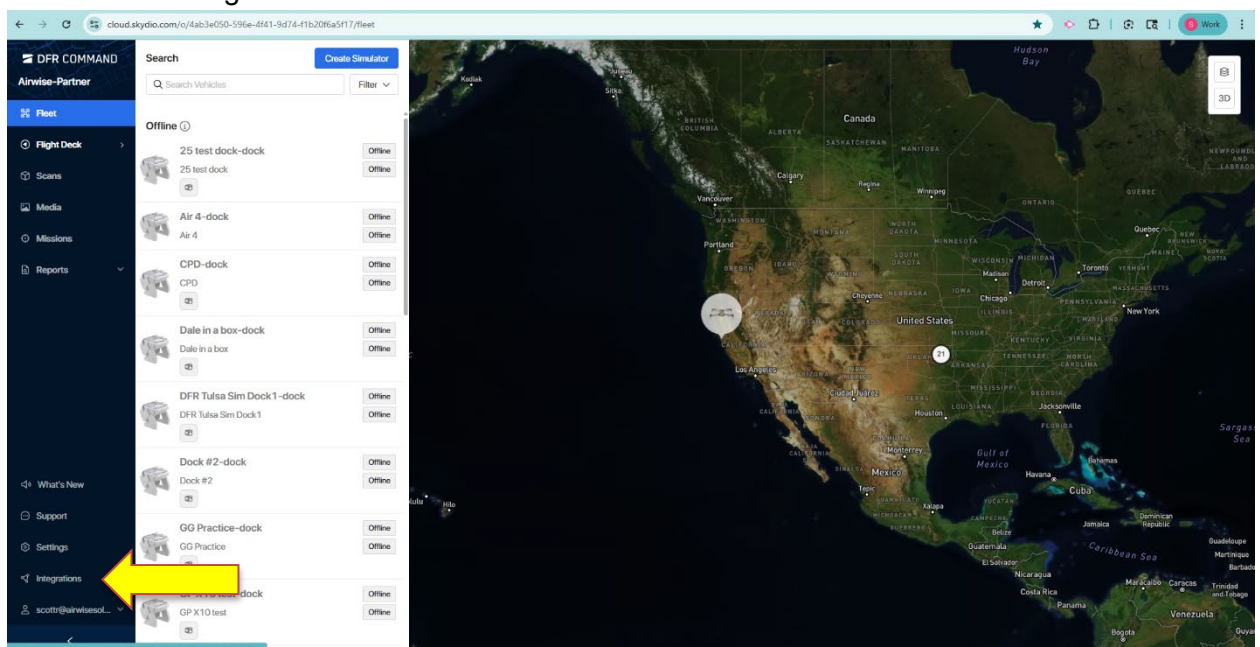

- 3) On the 'Integrations' page you'll find 'AirWise Solutions' on the top row, second from the left. Click on the Airwise logo or within our box.

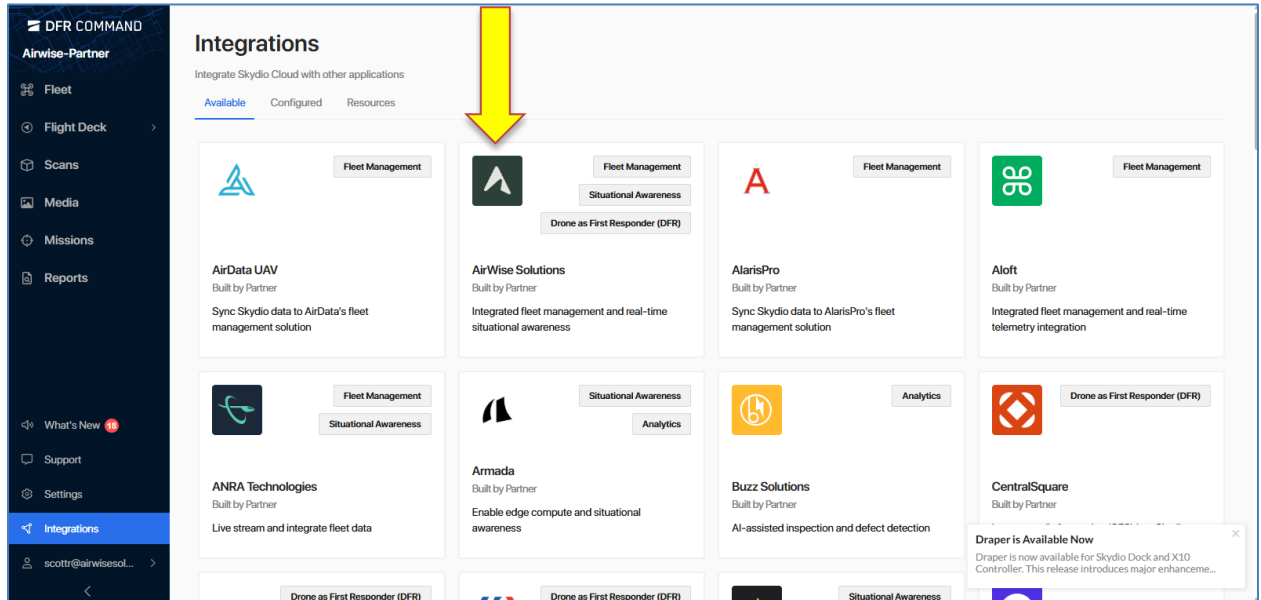


- 4) Click on the 'Configure' button

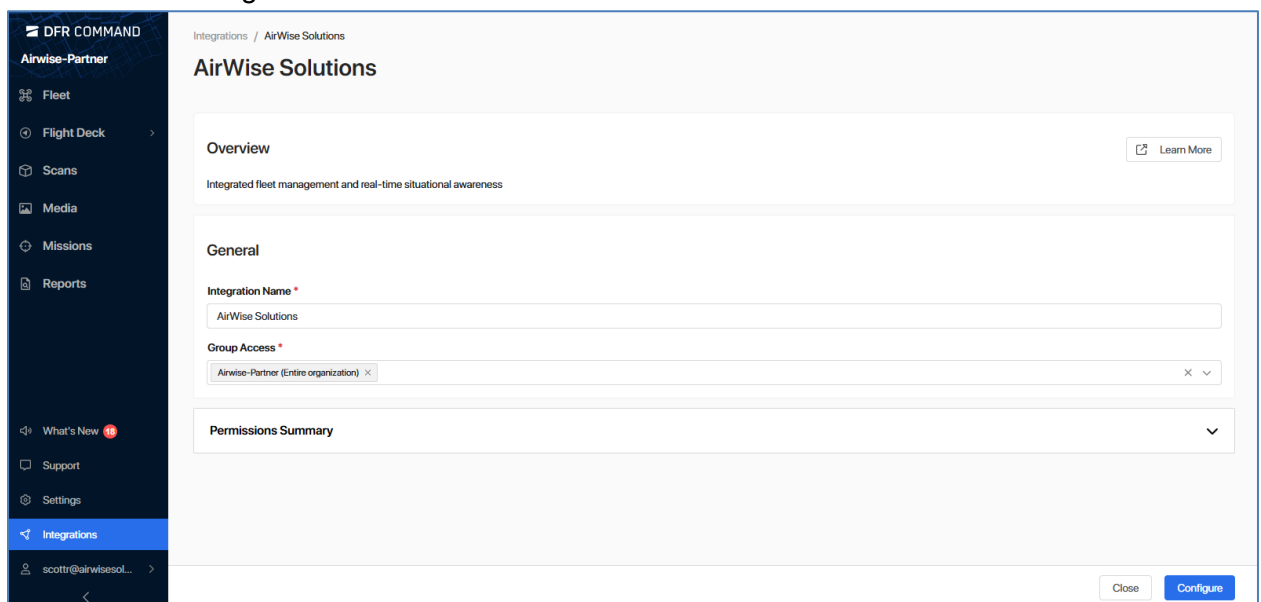


- 5) Once configured, you'll be given a 'Skydio API Token' and a 'Skydio Token Secret'. Save both of these in a secure location.


****NOTE: You'll only be given the 'Skydio Token Secret' one time and then it will not be available again so be sure to copy and paste it correctly.**

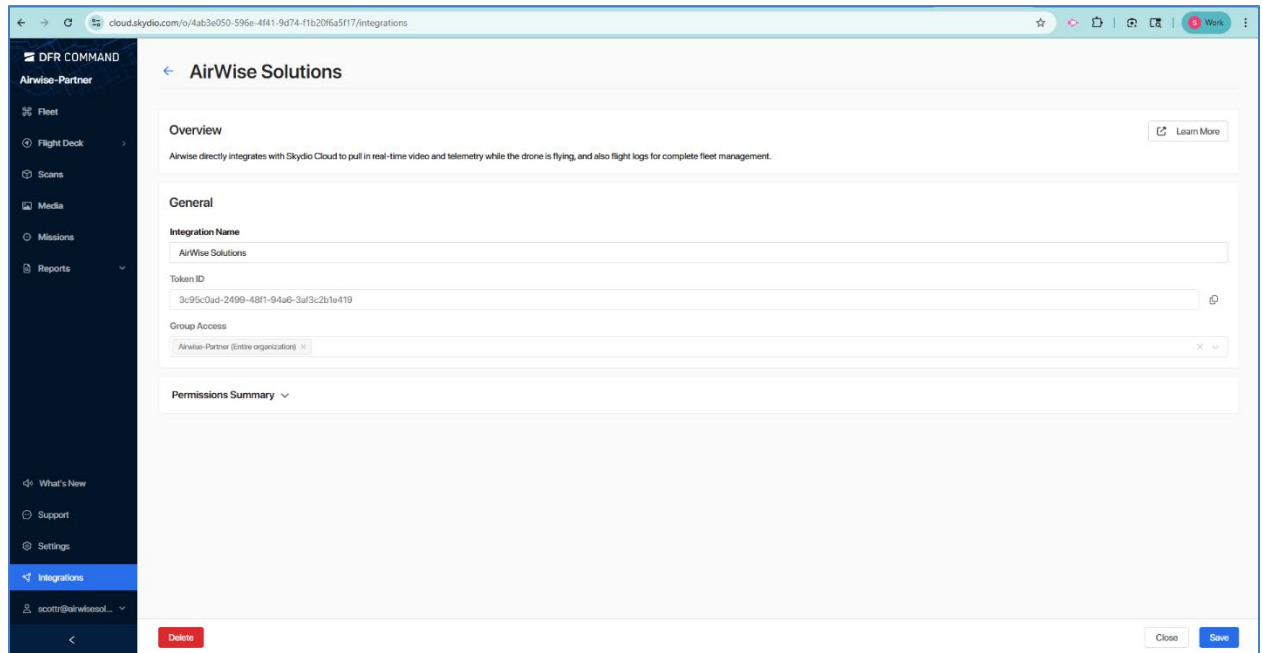


- 6) AirWise will need the serial number for each Skydio aircraft you're going to set up in our system. The serial number will be in the format of 'SkydioX10-1234' or 'SkydioX2-1234'.
- 7) Send the Skydio API Token, Skydio Token Secret and serial number of each aircraft to our Customer Success team at support@airwisesolutions.com so we can add them to your account in our system.
- 8) Next, we need to verify that the Live APIs are turned on. Click on "Settings" in the left hand menu.

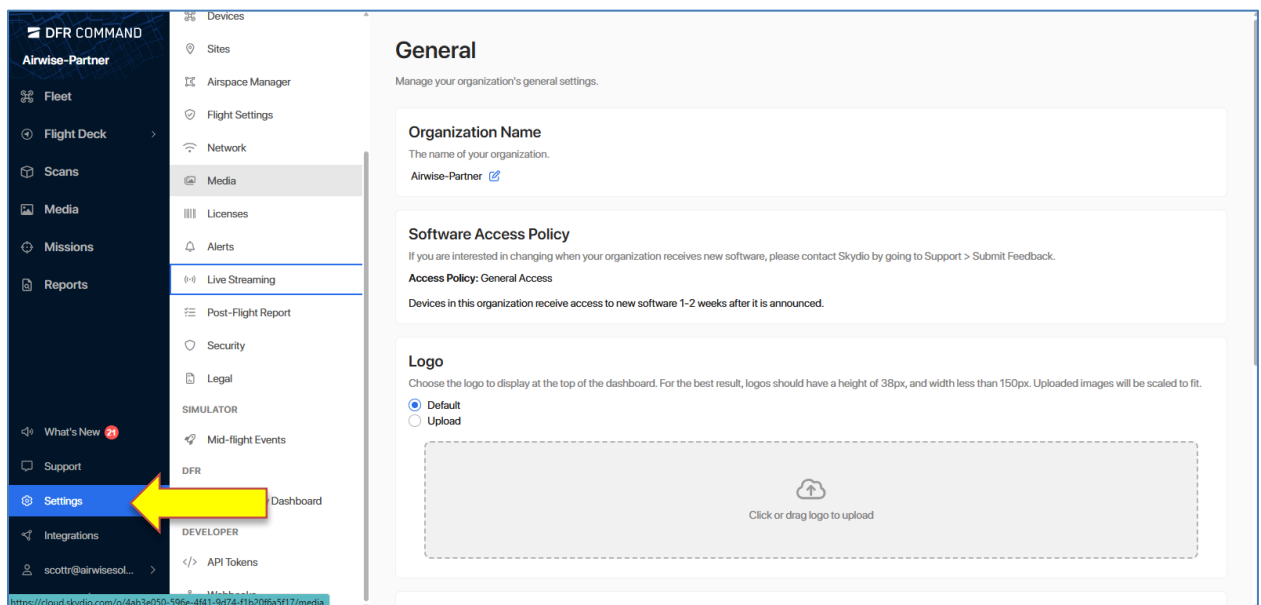


9) Next, click on “Live Streaming”

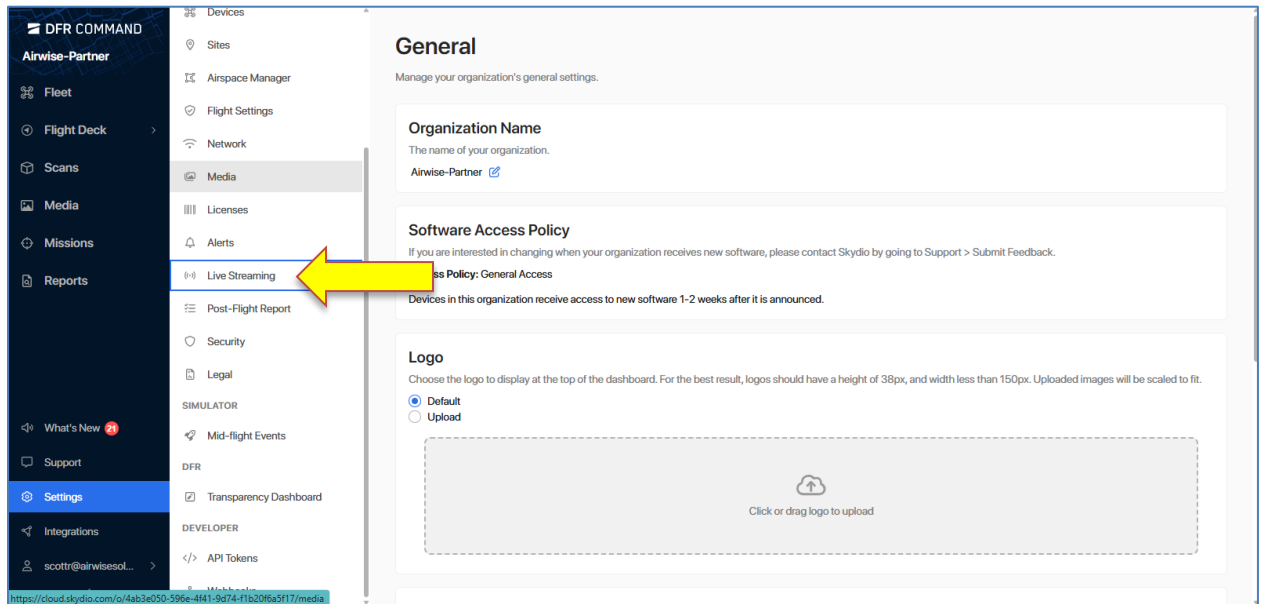

10) Next, click on “Live APIs”

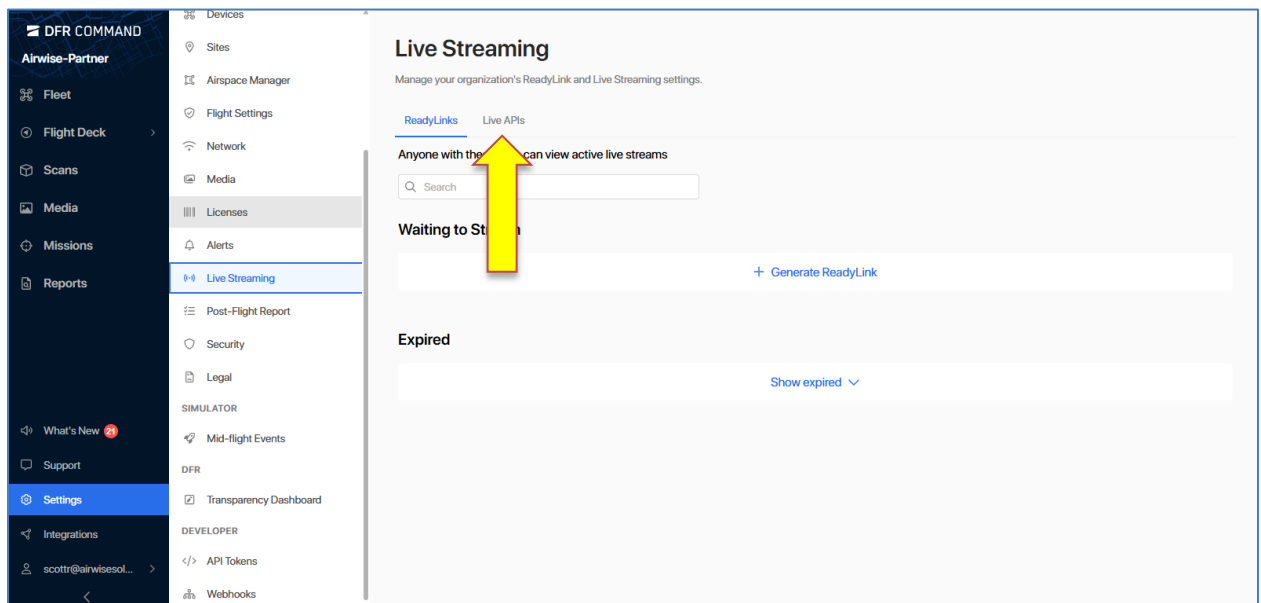


11) Next, verify that the toggle for both RTSP Streaming and Live Telemetry have been turned on. If they have not, and are grey in color, click on them.

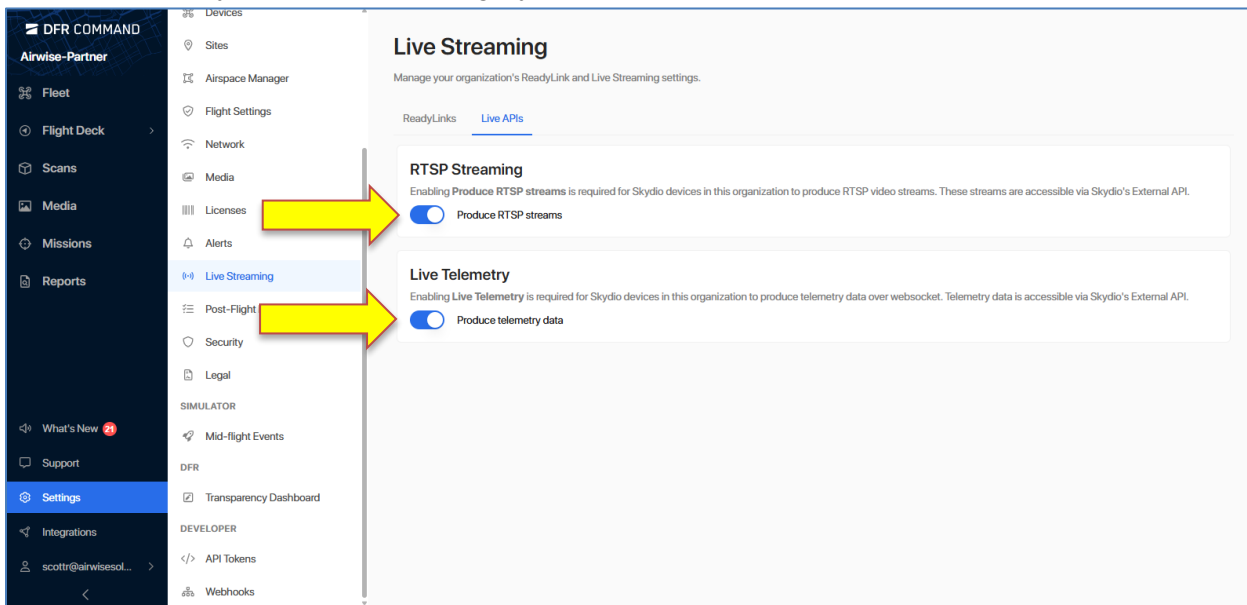

UASidekick Video Livestream Integration Details:


To set up AirWise Sidekick for viewing Video Livestream from your drone(s) there are 3 steps that need to be taken.

- 1) Apply Livestream settings to the aircraft in your fleet
 - 2) Determine who the Viewers will be.
 - 3) Create Missions so Viewers can see the Livestreams
-
- 1) The first step is to apply the Livestream settings to the aircraft in your fleet. This can only be done by an Enterprise Administrator.
 - a. Click on the 'Nine-Dot' menu and then select 'Enterprise Admin'

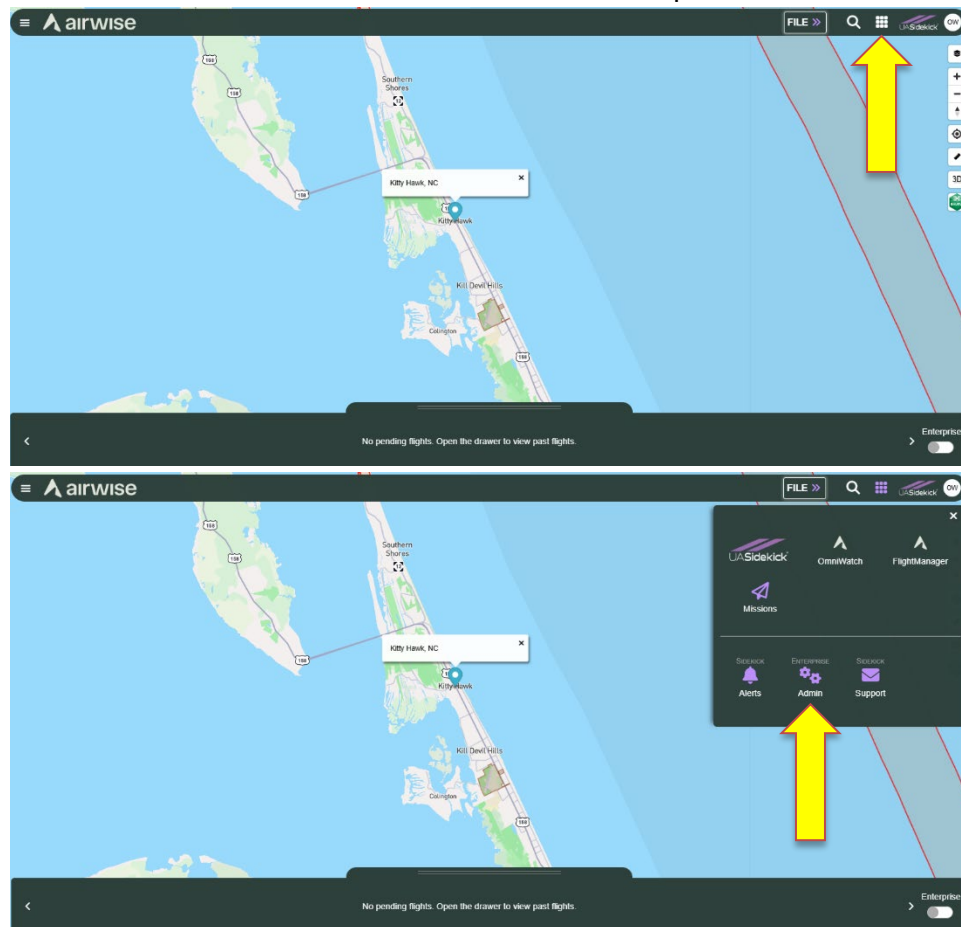


AIRWISE – SKYDIO LIVESTREAM AND TELEMETRY SETUP GUIDE


- b. Click on the 'Aircraft' tab and then select the aircraft to add Livestream

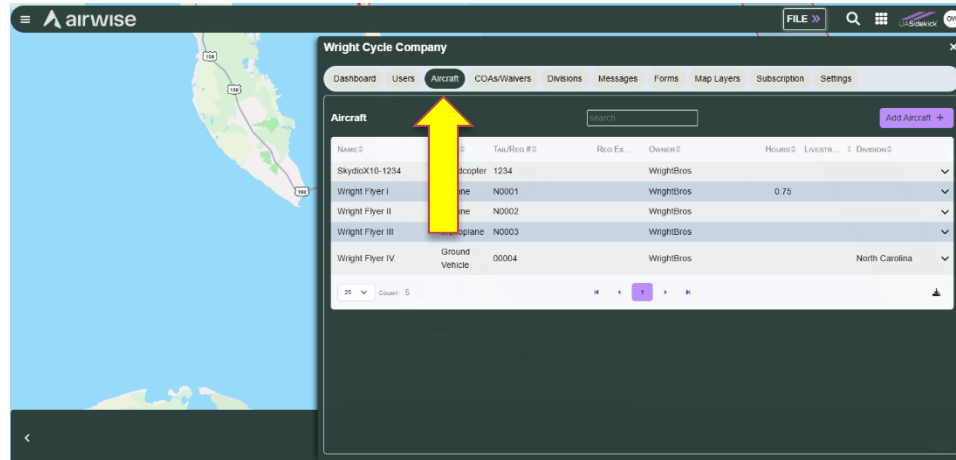


- c. Click the 'Edit' button

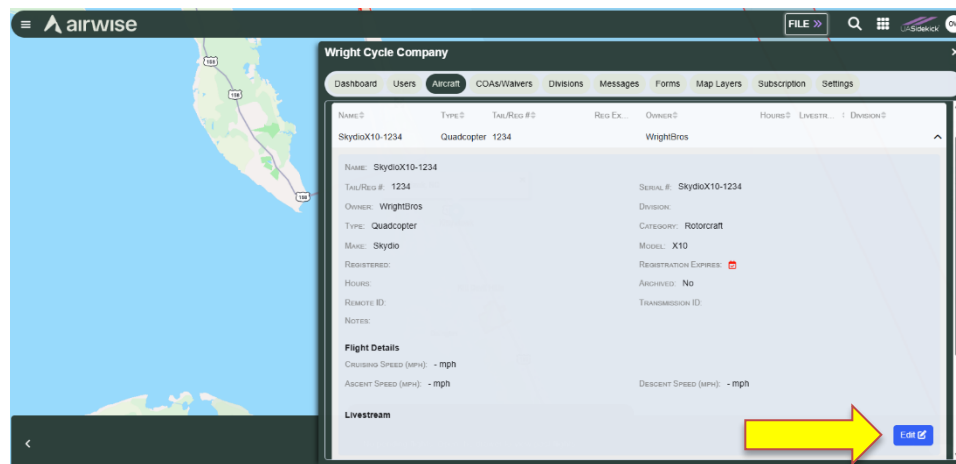


- d. Enter the drone serial number in the Serial # field

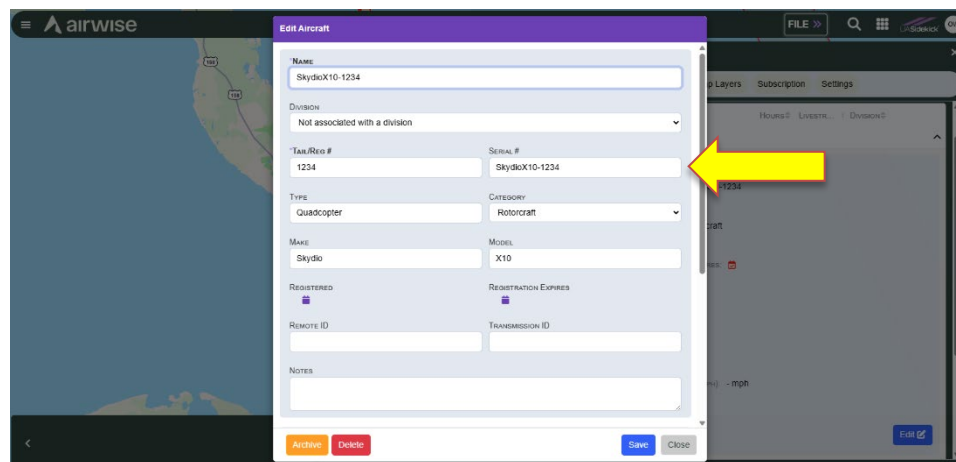

- e. Scroll down to the bottom of the Edit Aircraft window and click on the 'Add Livestream +' link

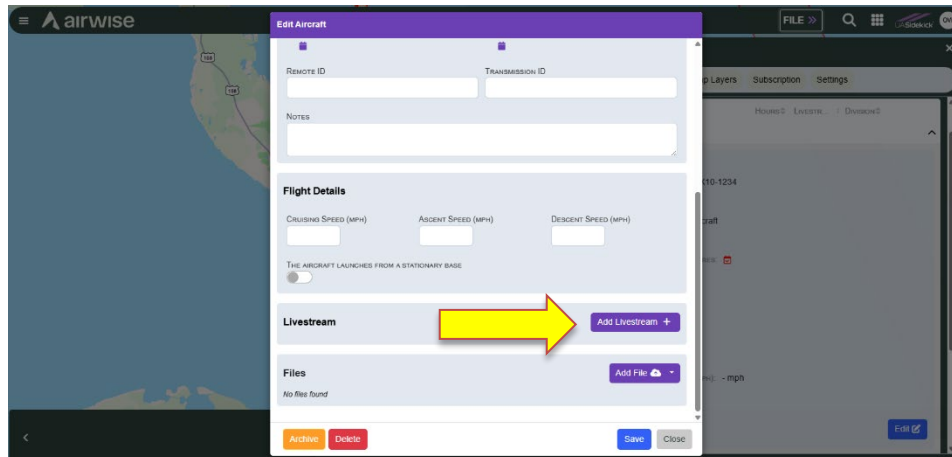


- f. Since Skydio aircraft transmit both RGB and Thermal video streams at the same time, you can set up Livestreams for both in your Mission. Enter RGB as the name for Livestream 1. This name will be displayed below the Livestream 1 window.
- g. Enter the drone serial number in the 'ID' field. This serial number MUST match the serial number entered above in the Serial # field of the Edit Aircraft window

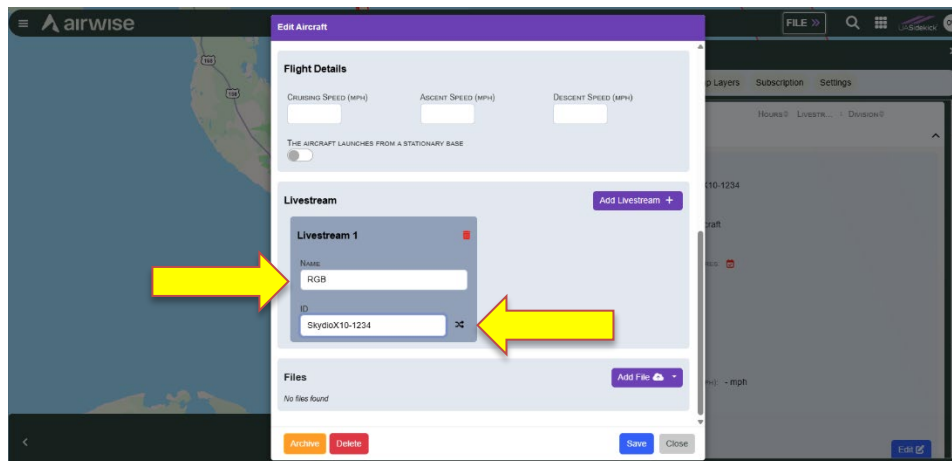


AIRWISE – SKYDIO LIVESTREAM AND TELEMETRY SETUP GUIDE

- h. Click on the 'Add Livestream +' link again to add the second Livestream. This will be the Thermal Video Stream.
- i. Enter Thermal as the name for Livestream 2. This name will be displayed below the Livestream 2 window.
- j. Enter the drone serial number in the 'ID' field followed by a lower case 't'. Example: SkydioX10-1234t

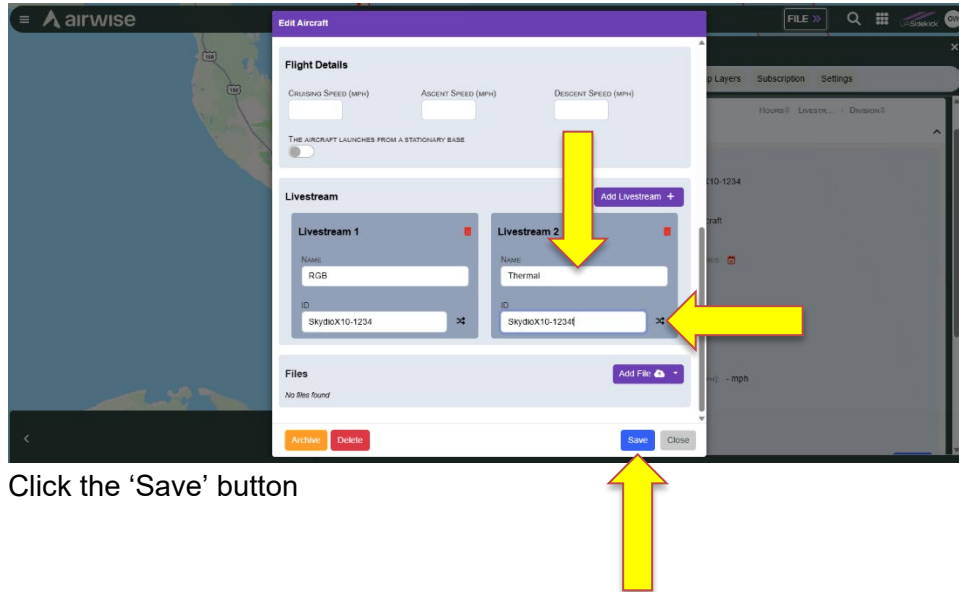


- k. Click the 'Save' button

- 2) The next step is determining who the viewers for the Livestream will be. There are two types, Pilots and invited Viewers. All of the Pilots in your organization are automatically eligible to be Livestream Viewers. You can also invite people other than pilots in your organization to be Livestream Viewers. They can either be from inside or outside your organization. The great part is you can invite as many as you want and they do not count against the number of seats your organization has purchased.
 - a. Click on the 'Users' tab of the 'Enterprise Admin' window
 - b. Click on the 'Viewers' sub-tab
 - c. Click on the 'Invite Viewer +' button

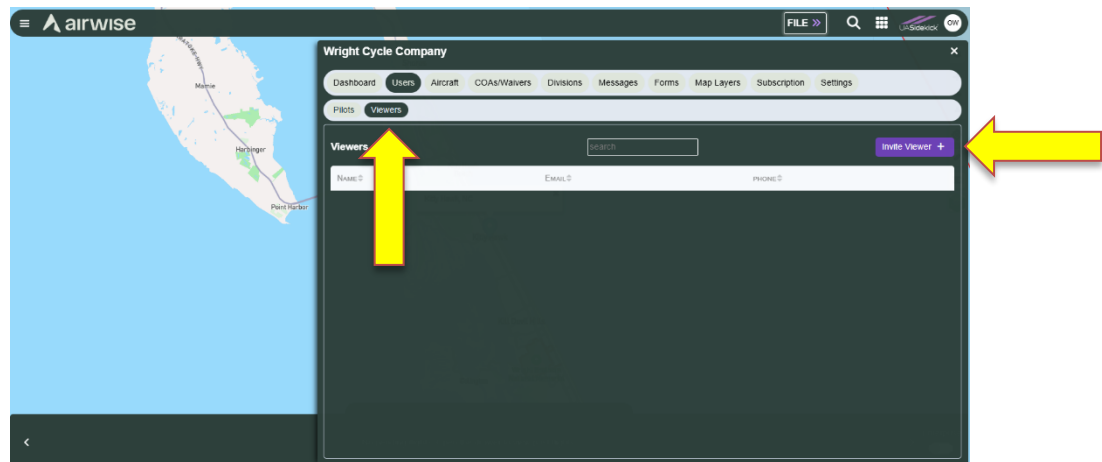


- d. Enter the email address for the viewer you would like to invite
- e. Click on the 'Save' button

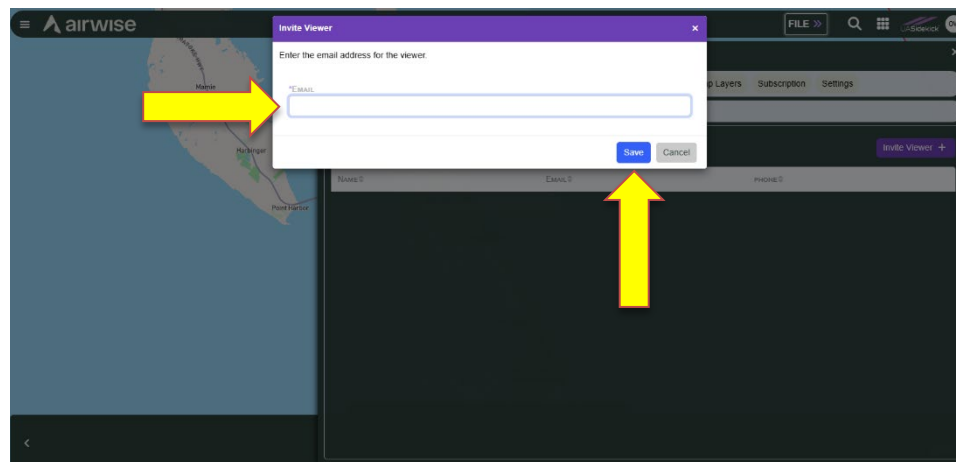


The person you've invited will receive an email with a link to the AirWise Sidekick subscription page. They'll need to create a Viewer subscription by entering their Name, Email, Phone Number and creating a password. They will then be able to receive notification by email or text when the Livestream starts.

- 3) The last step is to create a Mission. Missions are where the Livestreams are actually viewed.


- a) Click on the 'Missions' icon in the 'Nine-Dot' menu

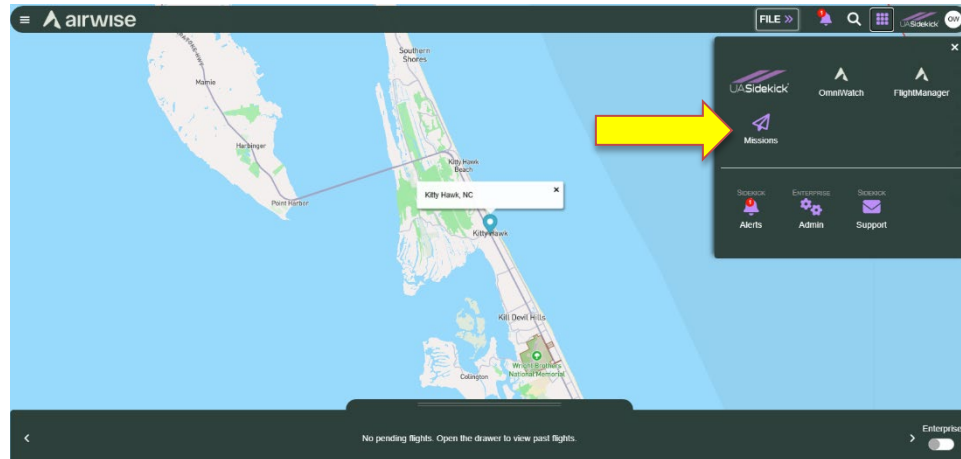


- b) Click on the 'Add Mission' button

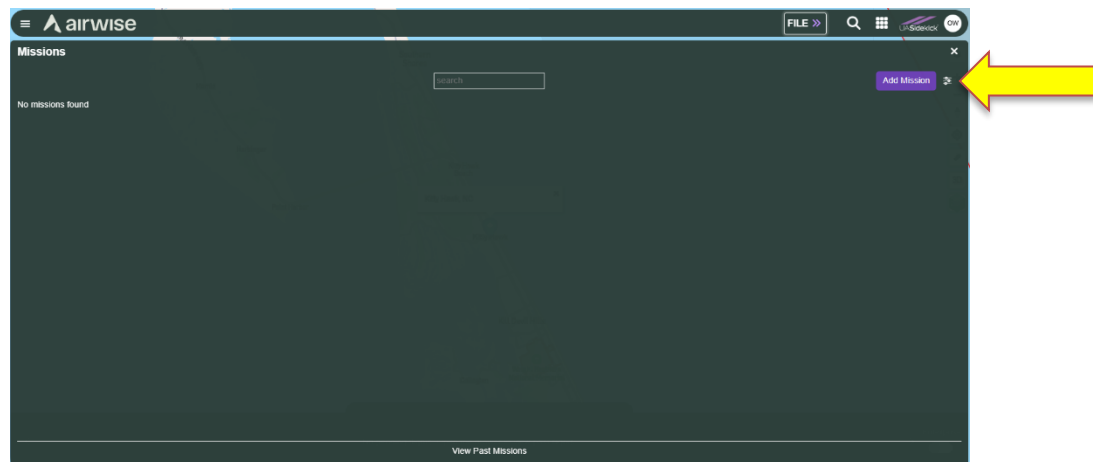


- c) Enter a name for the Mission. *This is a required field*
 d) You can enter a description for the mission if you'd like.
 e) You can select if the Mission is going to be Permanent or not. A permanent mission will always be visible by those with access to the mission. Create a permanent mission for viewers who need quick and always available access to a drone's livestream.
 f) If the Mission is not Permanent, enter the date and time when the Mission begins along with the duration of the Mission in Days, Hours and Minutes.

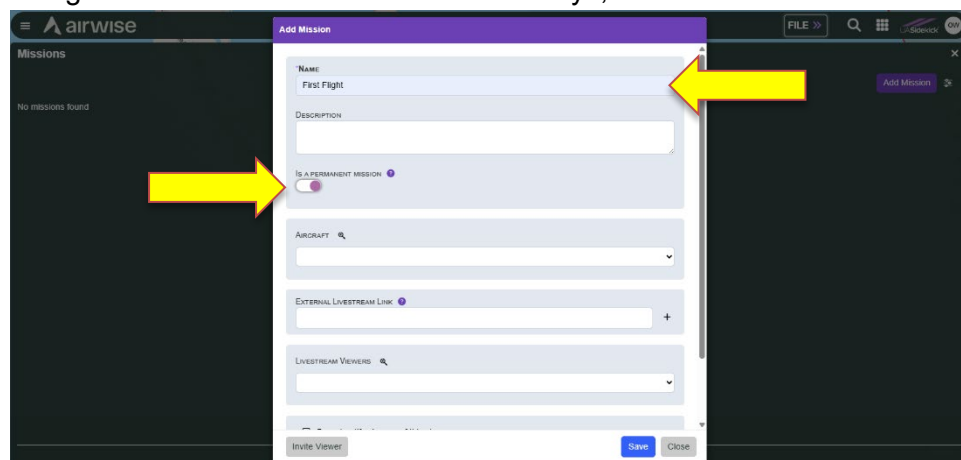

- g) To select which Livestream will be available in the Mission, click on the Aircraft drop down menu and select. You can select as many Aircraft/Livestreams as you like.

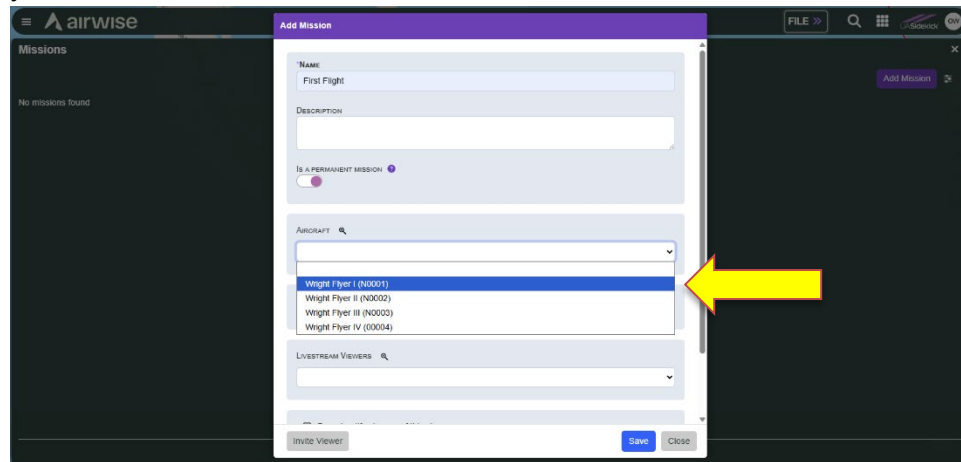

- h) Select which Viewers you would like to add to the Mission by clicking on the 'Livestream Viewers' drop down menu.

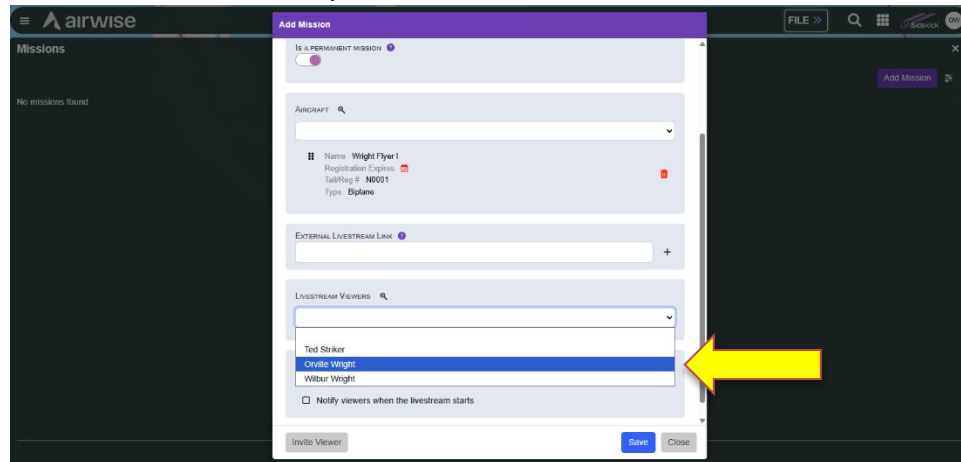

- i) If you do not want the viewers to know when changes are made to the Mission select the check box next to 'Do not notify viewers of this change'
- j) Selecting the check box next to 'Notify viewers when the livestream starts' will allow all of the viewers to receive an email and/or text message when any of the Livestreams in the Mission begin.
- k) If you need to add any additional Viewers you can use the 'Invite Viewers' button in the lower left corner of the 'Add Mission' window.

AIRWISE – SKYDIO LIVESTREAM AND TELEMETRY SETUP GUIDE

- l) Click the 'Save' button when all information has been entered.

The screenshot shows the 'Add Mission' dialog box in the Airwise application. The dialog is titled 'Add Mission' and has a purple header. It contains several sections: 'AIRCRAFT' with a dropdown menu, 'EXTERNAL LIVESTREAM LINK' with a text input field and a plus icon, 'LIVESTREAM VIEWERS' with a dropdown menu and a list of viewers (one named 'Orville Wright' is visible), and two checkboxes: 'Do not notify viewers of this change' and 'Notify viewers when the livestream starts'. At the bottom of the dialog are buttons for 'Invite Viewer', 'Save', and 'Close'. A yellow arrow points from the left towards the 'Save' button, and another yellow arrow points from the 'Notify viewers when the livestream starts' checkbox down towards the 'Save' button.